



291-9B437-0000F

Using an SD memory card with your ZBOX

Please remove the sticker covering the card slot before first use. Insert the SD memory card into the SD memory card reader slot with the metal contacts facing upwards as shown below.

