





ZOTAC





ZBOX EN1070 ZOTAC ZBOX User's Manual

No part of this manual, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of ZOTAC.

Products and corporate names mentioned in this manual may not be registered trademarks or copyrights of their respective companies, and are used for identification purposes only. All trademarks are the property of their respective owners.

Every effort has been made to ensure that the contents of this manual are correct and up to date. However, the manufacturer makes no guarantee regarding the accuracy of its contents, and reserves the right to make changes without prior notice.

CAUTION:

Risk of explosion if the battery is replaced with an incorrect type. Batteries should be recycled where possible. Disposal of used batteries must be in accordance with local environmental regulations.

Table of Contents

| roduct Specifications | 3 |
|---|----|
| afety information | |
| Setting up your system | 4 |
| Care during use | 4 |
| /elcome | 5 |
| Package contents | 5 |
| etting to know your ZOTAC ZBOX | 6 |
| Front view | 6 |
| Rear view | 7 |
| nstalling Hardware inside ZOTAC ZBOX | 8 |
| Installing a memory module | 9 |
| Removing the memory module | 10 |
| Installing a hard drive | 11 |
| Installing M.2 SSD module | 13 |
| etting up your ZOTAC ZBOX | 14 |
| nstalling drivers and software | 16 |
| Installing an operating system | |
| Installing system drivers | |
| sing your ZOTAC ZBOX | |
| Configuring a wireless connection | 17 |
| Configuring a wired connection Using a static IP | |
| Using a static IPUsing a static IPUsing a dynamic IP (PPPoE connection) | |
| Configuring audio output | |

Product Specifications

- Microprocessor support

 Intel Core i5-6400T (quad-core, 2.2 GHz, up to 2.8 GHz)

 Operating systems:

 Supports Windows 8.1 / 10 32/64-bit

 System Memory support

 Two DDR4-2133/1866 SODIMM slots
 Up to 32 GB of memory

 USB Ports

 One USB 3.1 Type-C port, one USB 3.1 port
 Two USB 3.0 ports
 - Two USB 2.0 ports
- Onboard Serial ATA
 - SATA 6.0 Gb/s transfer rates
 - Supports one 2.5-inch SATA HDD or SSD (max 9.5mm height)
- □ Expansion slot
 - One M.2 PCIe x4 / SATA III SSD slot (22/42,22/60,22/80)

Onboard Dual LAN

- Supports 10/100/1000 Mbps operation
- ♦ Supports IEEE 802.3
- □ WiFi/Bluetooth support
 - Compliant with IEEE802.11ac standard
 - High speed wireless connection and enhanced wireless security
 - Fully qualified Bluetooth v4.0
- Onboard Audio
 - Stereo analog audio output and Microphone input
- Power Management
 - Supports ACPI (Advanced Configuration and Power Interface)
- Onboard Graphics support
 - NVIDIA GeForce GTX 1070 w/ 8GB GDDR5, 256-bit
 - Two HDMI 2.0 ports, two DP 1.3 ports (support 4K @ 60Hz)
- Product Size
 - 210mm x 203mm x 62.2mm

Safety information

Your ZOTAC ZBOX is designed and tested to meet the latest standards of safety for information technology equipment. However, to ensure your safety, it is important that you read the following safety instructions.

Setting up your system

- Read and follow all instructions in the documentation before you operate your system.
- Do not use this product near water or a heat source such as a radiator.
- Set up the system on a stable surface with the provided stand. Never use the system alone without the stand.
- Openings on the chassis are for ventilation. Do not block or cover these openings. Make sure you leave plenty of space around the system for ventilation. Never insert objects of any kind into the ventilation openings.
- ✤ Use this product in environments with ambient temperatures between 0°C and 35°C.
- If you use an extension cord, please use the UL listed cord and make sure that the total ampere rating of the devices plugged into the extension cord does not exceed its ampere rating.

Care during use

- Do not walk on the power cord or allow anything to rest on it.
- Do not spill water or any other liquids on your system.
- When the system is turned off, a small amount of electrical current still flows. Always unplug all power, modem, and network cables from the power outlets before cleaning the system.
- If you encounter the following technical problems with the product, unplug the power cord and contact a qualified service technician or your retailer.
 - > The power cord or plug is damaged.
 - > Liquid has been spilled into the system.
 - > The system does not function properly even if you follow the operating instructions.
 - > The system was dropped or the cabinet is damaged.
 - > The system performance changes.

Welcome

Congratulations on your purchase of the ZOTAC ZBOX. The following illustration displays the package contents of your new ZOTAC ZBOX. If any of the below items is damaged or missed, contact your retailer.

Package contents

- 1 x ZOTAC ZBOX
- 1 x AC Adapter
- 1 x Power Cord
- 1 x Antenna
- 1 x Support DVD
- 1 x USB flash drive with OS drivers
- 1 x User Manual & Warranty Card
- 1 x Quick Start Guide



Getting to know your ZOTAC ZBOX Front view



Refer to the diagram below to identify the components on this side of the system

1. Power switch

The power switch allows powering ON and OFF the system. The ring LED can be disabled in BIOS setting.

2. Memory card slot

The Memory card slot is compatible with SD/SDHC/SDXC cards used in devices like digital cameras, MP3 players, mobile phones and PDAs.

3. Power LED

The Power LED is always ON when power is on.

4. WiFi LED

The WiFi LED is always ON when WiFi was active.

5. Hard disk LED

The hard disk LED blinks when data is being written into or read from the hard disk drive.

6. USB 3.1 port

The USB 3.1 port supports the SuperSpeed USB 3.1 devices and is backwards compatible with USB 3.0/2.0/1.1 devices. Use this port for USB 3.1 devices for maximum performance with USB 3.1 compatible devices.

7. Microphone jack

The microphone jack is designed to connect the microphone used for video conferencing, voice narrations or simple audio recordings.

8. Headphone/Audio Out jack

The stereo headphone jack (3.5mm) is used to connect the system's audio out signal to amplified speakers or headphones.

9. USB 3.1 Type-C port

The USB 3.1 type-C port supports the SuperSpeed USB 3.1 devices. Use this port for USB 3.1 devices for maximum performance with USB 3.1 compatible devices.

Rear view



Refer to the diagram below to identify the components on this side of the system.

1. Power input (DC19.5V)

The supplied power adapter converts AC power to DC power for use with this jack. Power supplied through this jack supplies power to the PC. To prevent damage to the PC, always use the supplied power adapter.

2. USB 2.0 ports

The USB (Universal Serial Bus) port is compatible with USB devices such as keyboards, mice, cameras and hard disk drives.

3. USB 3.0 ports

The USB 3.0 port supports the SuperSpeed USB 3.0 devices and is backwards compatible with USB 2.0/1.1 devices. Use this port for USB 3.0 devices for maximum performance with USB 3.0 compatible devices.

4. DisplayPorts

DisplayPorts supports both external (box-to-box) and internal (laptop LCD panel) display connections.

5. HDMI ports

The HDMI (High Definition Multimedia Interface) port supports a UHD device such as an LCD TV or monitor to allow viewing on a larger external display. (Only one display output is supported by SteamOS.)

6. LAN ports

The eight-pin RJ-45 LAN ports support standard Ethernet cables for connection to a local network.

7. WiFi antenna connector

The WiFi antenna connector supports WiFi antenna module.

☞ The power adapter may become warm to hot when in use. Do not cover the adapter and keep it away from your body.

Installing Hardware inside ZOTAC ZBOX

Before installing hardware, please follow the instructions below to remove the cover of your ZOTAC ZBOX.

1. Remove the two rear thumb screws.





2. Gently remove the cover as shown below.



Installing a memory module

1. Locate the SO-DIMM memory slots and insert a SO-DIMM memory module into the slot at a 45 degree angle.



Gently press down on the memory module until it locks into place by the arms of the memory slot.



Note:

- 1. This ZOTAC ZBOX accomodates two DDR4 SO-DIMM memory modules. You must install at least one module in one of the two slots.
- 2. PLUS and Windows models include memory pre-installed.

Removing the memory module

1. Locate the SO-DIMM memory slot and gently press the two arms securing the memory module outwards, as shown in the image below, to release the memory module.



2. Remove the memory module from the slot at a 45-degree angle.




Installing a hard drive

1. Locate the 2.5-inch SATA hard drive and the hard drive bracket.



2. Install the hard drive to the hard drive bracket.

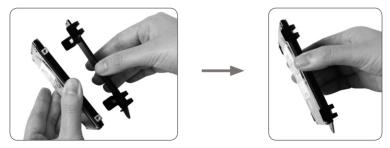

3. Insert the hard drive into the slot at a 45 degree angle and gently slide into the connector.



4. Secure the installed drive with a thumb screw.



*1 TB 2.5-inch SATA hard drive is pre-installed in Plus and Windows version.

Installing M.2 SSD module

1. Locate the M.2 SSD slot and insert an M.2 SSD module into the slot at a 45 degree angle.




2. Gently press down on the M.2 SSD module, and install the screw.



*a 120GB M.2 SSD is pre-installed in PLUS and Windows model.

Setting up your ZOTAC ZBOX

You need to connect peripherals before using your ZOTAC ZBOX.

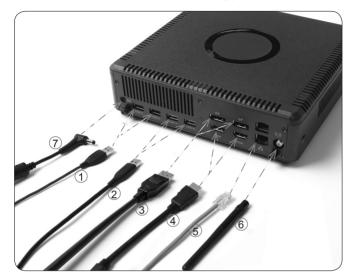

1. Connecting to USB 2.0 devices

Connect USB devices like wired/wireless keyboards (varying with areas), mouse devices and printers to the USB ports on the system rear panel.

2. Connecting to USB 3.0 devices

Connect USB 3.0 devices such as external hard drives, SSDs and flash drives to the USB 3.0 port on the system rear panel.

3. Connecting to DisplayPort displays

Connect the DisplayPort connectors to the DP ports of the monitor or display.

4. Connecting to HDMI displays

Connect one end of an HDMI cable to the HDMI port on the system rear panel and the other end to a HDMI-compatible display such as an HDTV or monitor.

5. Connecting to a network device

Connect one end of a network cable to the LAN port on the system rear panel and the other End to a hub or switch.

6. Connecting a WiFi antenna module

Connect a WiFi antenna module to the WiFi antenna connector.

7. Turning on the system

Connect the supplied AC adapter to the DC IN jack on the system rear panel and then press the power switch on the front panel to turn on the system.

☞ When your ZOTAC ZBOX is not in use, unplug the power adapter or switch off the AC outlet to save on power consumption.

Installing drivers and software

Installing an operating system

The ZOTAC ZBOX does not ship with an operating system preinstalled. The user must install the operating system before the ZOTAC ZBOX can be used. The following operating systems are supported:

• Windows 8.1 / 10 32/64-bit

Follow the instructions below to install an operating system:

- Attach external DVD drive via USB 3.0 or 2.0 ports. Note: USB3.1 and USB 3.1 Type-C ports do not support OS installation.
- 2. Insert disk for operating system (Windows or Linux).
- 3. Wait for the ZOTAC ZBOX to boot from the disk.
- 4. Follow the onscreen directions to install the operating system.
- 5. Install system drivers to gain full functionality of the ZOTAC ZBOX hardware and features.

Installing system drivers

Before you can use the full features of the ZOTAC ZBOX, the system drivers must be installed. The following types of operating systems are supported by the ZOTAC ZBOX driver DVD and USB flash drive:

• Windows 8.1 / 10 32/64-bit

Follow the instructions below to install the system drivers:

- Insert the ZOTAC ZBOX driver DVD or driver USB flash drive. If autorun is enabled, the driver installation main menu will show up automatically. If autorun is disabled, you may click the file Launch.EXE to bring up the driver installation main menu.
- 2. The following drivers are available on the DVD and USB flash drive:
 - Intel Chipset Driver
 - HDA Sound Driver



- NVIDIA Graphics Driver
- Ethernet PCI-E Driver
- Wireless Network Driver
- Intel Management Engine
- Bluetooth Driver
- CIR Driver
- MassStorage Driver
- Asmedia USB Controller
- USB Charger (optional)

Note: If you want to use high-amperage USB charging for smartphones and tablets, please install the driver USB Charger driver.

- ⇐ Each driver must be installed individually to ensure proper operation of the ZOTAC ZBOX.
- 3. Select the driver you want to install. The driver installer should launch.
- 4. Follow the onscreen instructions to install the drivers.
- 5. Restart the system.

Using your ZOTAC ZBOX

Configuring a wireless connection

Please follow the instructions below to connect to a wireless network:

- 1. Double-click the wireless network icon (pic) in the notification area.
- 2. Select the wireless network you want to connect to from the list and click Connect.
- After connection is established, you will see "Connected." Note 1: For security concerns, Do NOT connect to an unsecured network, otherwise, the transmitted information without encryption might be visible to others.

Note 2: Enter the network security key if necessary.

| Not connected | 49 | Â |
|-----------------------------|---------|---|
| Connections are available | | |
| Wireless Network Connection | ^ | |
| linksys | 31 | |
| Gon | nect | |
| Collecteday | .all | |
| Emilian | .et | |
| Post | the. | |
| Testing | .11 | |
| Timige | .ell | |
| Ane-State | al | + |
| Open Network and Sharing Ce | enter | |
| - 🦽 🕩 | 10:10 A | м |

Configuring a wired connection

Using a static IP

- Right-click the network icon in the notification area and select "Open Network Connections".
- Right-click "Local Area Connection" and select "Properties".
- 3. Highlight "Internet Protocol (TCP/IP)" and click "Properties".
- 4. Select "Use the following IP address".
- 5. Enter your IP address, subnet mask and Default gateway.
- 6. Enter the preferred DNS server address if necessary.
- 7. After entering all of the related values, click "OK" to finish the configuration.

Using a dynamic IP (PPPoE connection)

- 1. Repeat Step 1-3 in the previous section.
- 2. Select "Obtain an IP address automatically" and click "OK".
- Click "Create a new connection" to start the NEW Connection Wizard.
- 4. Click "Next".
- Select "Connect to the Internet" and click "Next".
- 6. Select "Set up my connection manually".
- Select your connection type and click "Next".
- 8. Enter your ISP Name and click "Next".
- 9. Enter your User name and Password. Click "Next".

| Local Area Connection Properties | Discourse this connection Rename this connection ** | 8 · OI |
|-----------------------------------|--|--------|
| etworking Sharing | vork Connection , 2 85 Wireless Network | |
| Internet Protocol Version 4 (TCP) | | |
| General | | |
| for the appropriate P setting. | | |
| P address: | | |
| Subnet mask: Defoult gateway: | | |
| Cibitain DNS server address | automatically | |
| Use the following DNS served | er addresses: | |
| Preferred DNS server: | and the second sec | |
| Alternate DNS server: | | |
| Atemate DNS server: | | |



- 10. Click "Finish" to finish the configuration.
- 11. Enter your user name and password. Click "Connect" to connect to the internet. Note: Contact your internet Service Provider (ISP) if you have problems connecting to the network.

Configuring audio output

Follow the steps below to enable audio output when connecting the ZOTAC ZBOX to a TV or receiver via DP/HDMI adapter.

- 1. Access the Sound settings via the system Control Panel.
- Under Playback devices, click the display device that corresponds with your audio compatible display.
- 3. Click the "Set Default" button in the lower right hand corner.
- 4. Click "OK" to exit the setup.

| layback | Recording Sounds Communications | |
|----------|---|------------|
| Select a | playback device below to modify its settings: | |
| | NVIDIA HDMI Output (Port 1) NVIDIA High Definition Audio Not plugged in | |
| | NVIDIA HDMI Output (Port 2) NVIDIA High Definition Audio Not plugged in | |
| | NVIDIA HDMI Output (Port 3) NVIDIA High Definition Audio Not plugged in | |
| - | U2870-8 NVIDIA High Definition Audio Default Device | |
| 0. | Speakers Realtek High Definition Audio Not plugged in | |
| Canf | iqure Set Default 💌 | Properties |
| Com | igure Set Delaurt + | Properties |